

DK-AL1-TUY Hidden Video Recorder Camera

DK-AL1-TUY WiFi DVR Camera



Product Description

DK-AL1-TUY is a video recorder with a built-in camera hidden in a USB Type-C charger of the type commonly used for mobile phones.

SD card slot and reset button

If you look carefully at the product you will locate two details that will be useful in the operations that follow:

1 - THE SD CARD SLOT
To insert the micro SD memory for recording 2 - THE
RESET BUTTON

To restore factory settings



In all models the position of these two elements is always the same, as you see in the figure above. In some models these two details can be masked by an adhesive label that you must gently lift and then replace in its place.

Inserting the micro SD card

The first thing to do, if you want to make recordings, is to insert a micro SD card into the appropriate slot. In the photo above you can see the correct direction of insertion. You need to push the card into the slot, without forcing, until you hear the sound of it locking. It may be useful to push with your fingernail or use a sharp object or a small screwdriver to push the SD card all the way in.

To remove the SD card, push the card in gently until you feel it release, then remove it, possibly with the help of a pair of tweezers.

It is possible to use micro SD cards with capacity up to **128 GB in CLASS 10** or higher.

No micro SD card is included in the package.

Normally, you do not need to format the microSD card before inserting it into the device. The device detects it automatically and, once the camera is loaded into the Smartlife app, you will find the memory management in the settings. If you do not see the memory management in the settings in the app, it means that the SD card is not detected during use. You can try to format it beforehand with a computer in FAT32. If it is still not detected, you must replace it with a new one.

Power supply

The camera is powered by the electrical outlet to which it is connected. It is designed to remain always on to operate 24 hours a day. To turn off the camera, unplug it from the outlet.

Battery powered

This camera does not have an internal battery and will only work when plugged into an electrical outlet.

Assembly

The camera in the power supply shoots straight when inserted into a vertical socket as in this photo



The lens shoots frontally and is not orientable. If you do not have a socket in the correct position for shooting, you can insert the power supply into a power strip that you will then orient in the best way.

Use as a power supply

This is a detective camera, but it is also a real USB Type-C power supply, the kind used to charge mobile phones. The power supply is actually functional and you can use it to charge a phone, or other device, while the camera is running. However, it is not recommended to use USB charging for long periods of time in order to avoid overheating.

Storing videos

Video files are stored on a micro SD card (not supplied). The videos have a resolution of 3MP 2304x1296 at 25 f/sec.

You can use micro SD cards of any brand up to 128 GB capacity..

Once the memory space is full, the DVR automatically overwrites the oldest files.

1 hour of recording takes up an average of 400MB so you can fit over 300 hours of continuous recording on a 128GB SD card.

It is advisable to use event-based recording where possible, so as to only record significant images and not waste memory space when there is no action taking place in front of the lens.







DK-AL1-TUY Hidden Video Recorder Camera

Please note that the Tuya system does not allow you to browse the files stored in the SD card in readable format. You can play the video files and download them in MP4 format via the Smartlife app.

WiFi

This camera must connect to a wifi network to be used. When choosing the installation location, check with your mobile phone that the wifi signal of your network arrives with excellent strength, otherwise you will not have good video streaming on the app.

This camera supports both 2.4GHz and 5GHz wifi networks. The wifi network is essential for configuring the device. Subsequently, if the wifi network is missing, the device will continue to record normally, but will only be manageable from the app when the network is restored.

Audio

This camera is equipped with a microphone for ambient listening and a speaker for two-way dialogue.

Ignition of the device And mode coupling

This camera does not have a power switch and is automatically activated when plugged into the socket.

Pay attention to the sounds the device makes. As soon as you plug it into the socket you should hear a short multi-tone pattern that indicates it is turning on. After about a minute you will hear it emit **two short beeps that repeat periodically**. This double beep, repeated periodically, indicates that the device is waiting for configuration, to be added to the Smartlife app and connected to wifi. This is the time to add the device to the Smartlife app following the specific manual of the app that contains the instructions on how to proceed.

If after a couple of minutes of starting the camera, it does not emit the two beeps in quick succession, it means that it is not in configuration mode and cannot be added to the app. Then perform a reset with the reset button to restore the factory settings.

Download Smartlife and configure the device

This camera is designed to be controlled remotely via wifi with a mobile phone or tablet.

First of all you need to download the application from Google Play or Apple Store**SmartLife or Tuya Smart**, available for free for Android and iOS.

For using the program see the specific manual. Please note that this product supports the Configuration without QR code, with automatic recognition

DVR Reset by Button

If necessary, you can perform a RESET by powering the device and holding down the reset button for a few seconds. You can use a small screwdriver or a sharp object to hold down the reset button located behind the dedicated hole, next to the SD card slot.

It is necessary to reset if you need to connect to a new wifi network. If you reset it is also a good idea to delete the device in the smartlife app so that you can add the device again.

DVR Reset from App

If the camera is connected to the Internet and you want to reset it, for example to change Wi-Fi network, you can also reset it directly from the app, deleting the device from the Smartlife application.

Once you confirm the deletion from the app, the camera will beep and go back to wifi setup standby mode. You can then add the device again in the app, connecting it to the new wifi.

Continue in the Smartlife app manual

Now that you know all the hardware aspects of the camera you purchased, you can learn how to connect the camera to wifi and how to use it in the SMARTLIFE APP MANUAL for our investigative devices.

Download the app manual in the DOWNLOAD section section of our website.

